

Downloading and installing Solar Sizing Tool – Lorentz Compass

Step 1: Ask for an invitation to download COMPASS software by sending an email to solarquery@iom.int

Step 2: You will receive an email from Lorentz with a link. Click on the link



https://mail.google.com/mail/u/0/#inbox/15d7e9189d17c008

LORENTZ: Invitation to partnerNET

LORENTZ partnerNET <partnernet@lorentz.de>
to me

2:04 PM (2 minutes ago)

LORENTZ
The Solar Water Pumping Company

English:

We would like to invite you to join the LORENTZ partnerNET. partnerNET is a closed website (extranet) for use by LORENTZ partners, it provides marketing, sales, technical and support information all in one easy to access place.

To register for partnerNET please follow this link:
https://www.lorentz.de/en/register/new-partnernet-user__15e447c9274f2bec57d0c6057d58bac3.html

Following a short authorisation process you will receive an email confirming your access details.


With best regards
The LORENTZ Team

Español:

Nos gustaría invitarle a unirse a LORENTZ partnerNET, un sitio web (extranet) que solo es accesible a los partners de LORENTZ. partnerNET proporciona herramientas, información técnica y de soporte así como información de marketing y de ventas en un solo lugar de fácil acceso. La navegación en partnerNET actualmente solo está disponible en inglés pero hemos implementado la traducción automática que puede seleccionar en la parte superior de la pantalla.

Step 3: The link will direct you to Lorentz PartnerNet registration page.

Fill in all required data, acknowledge Terms of use and click Send.

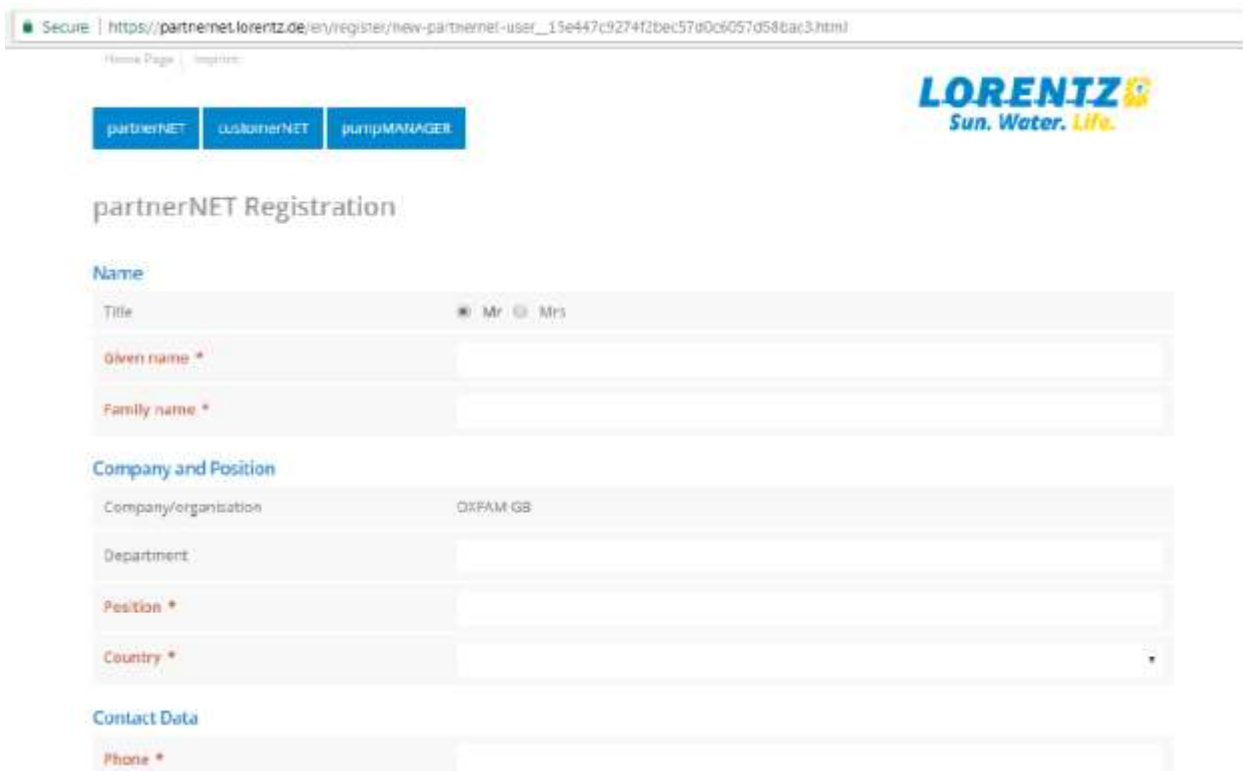

Secure | https://partnernet.lorentz.de/en/register/new-partnernet-user__15e447c9274f2bec57d0c6057d58bac3.html

Home Page | Imprimir

partnerNET customerNET pumpMANAGER

LORENTZ
Sun. Water. Life.

partnerNET Registration

Name

Title Mr Mrs

Given name *

Family name *

Company and Position

Company/organization OXFAM GB

Department

Position *

Country *

Contact Data

Phone *

Fields of Interest

Fields of interest

Sales Marketing Engineering Installation other

Newsletters

Subscribe to newsletter

LORENTZ General Newsletter LORENTZ Partner Newsletter

Terms of Use

LORENTZ partnerNET contains detailed, sensitive and commercially valuable information. We share this information with our partners for the sole use of helping you to succeed in your sales and service efforts.

partnerNET uses a login and password system for security. It is the user's responsibility to keep this safe and not to share it with other people. Staff of bona fide LORENTZ partners can and must register individually.

partnerNET is the source for the latest released sales and technical information. We would discourage downloading of large numbers of documents for offline use as these can quickly become out of date.

All information is provided by LORENTZ in good faith and to assist trained professionals. Content is sometimes given to supplement information contained in manuals and should be used in this context. LORENTZ makes many efforts to check content but errors and omissions are possible so good professional judgement should always be used.

When using partnerNET and services accessed through partnerNET (including COMPASS and any services we may introduce in the future) we may gather user based statistics. This information is used to improve the way information is presented and to enhance information by tracking usage and topic trends.

We treat privacy of your information seriously and will take good steps to secure it. LORENTZ will not pass any contact details onto third parties unless you expressly ask us to.

Misuse of partnerNET will result in temporary withdrawal of this service. Constant misuse will result in access for a partner being withdrawn.

If you do not agree with these conditions of use please inform the administrator at partnernet@lorentz.de and we will remove your access.

Acknowledgement *

I acknowledge that I have read and understood the Terms of Use, and agree to be bound by these terms.

Send

Step 4: Once registered the system will automatically log you in. You can also log in by clicking on 'Login' and 'log into partnerNET'. Username will be your email (step 2), password is the one entered during registration (step 3)

English ▼ Imprint

LORENTZ Solutions ▼ Products and Technology ▼ References ▼ Partners ▼ Company ▼ Login 🔍 🛒

LORENTZ Services

Username
andegwa@oxfam.org.uk

Password
.....

Forgotten your password?


Log into partnerNET

Log into customerNET


Log into pumpMANAGER

Contact Search Get Social

Step 5: Once you have logged in, go to tab 'Support', then click on 'COMPASS software'

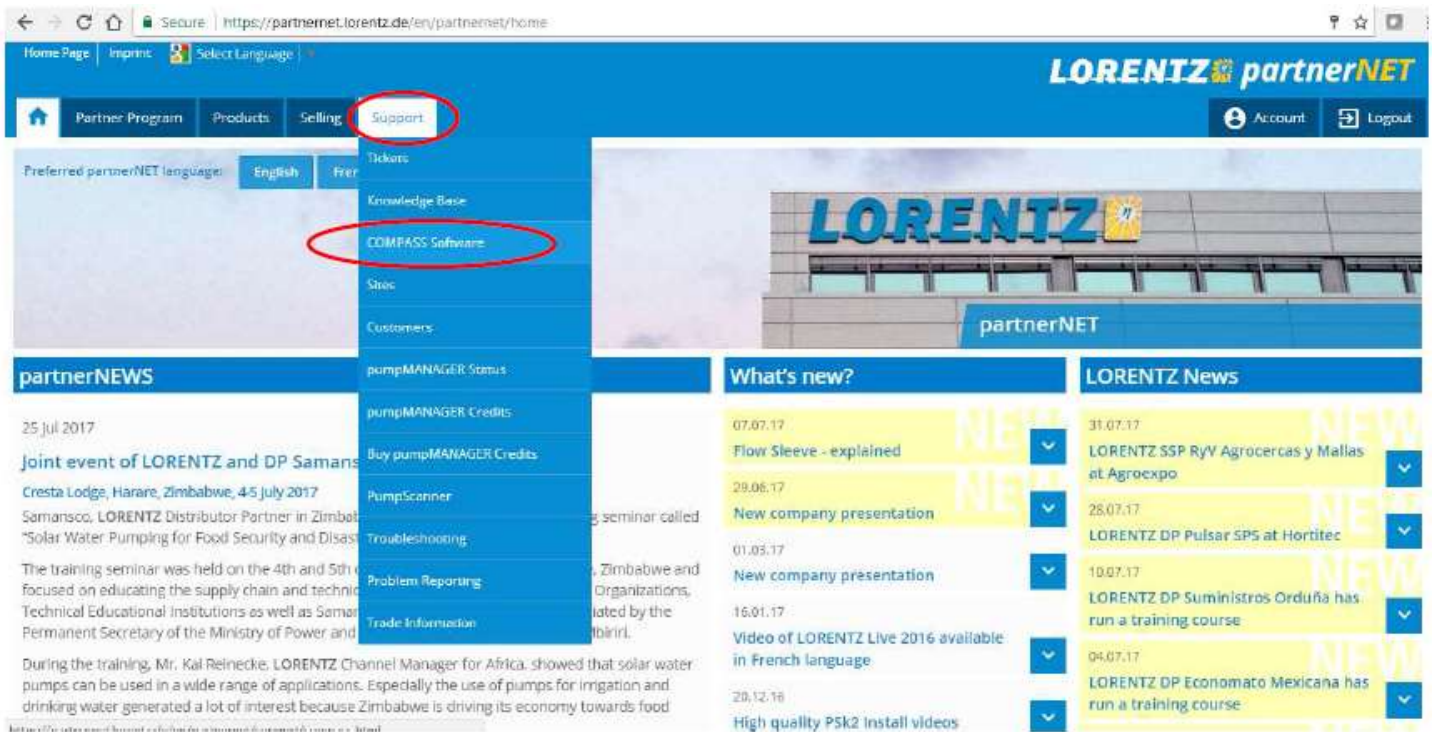

Step 6: Accept terms and activate your COMPASS license ID

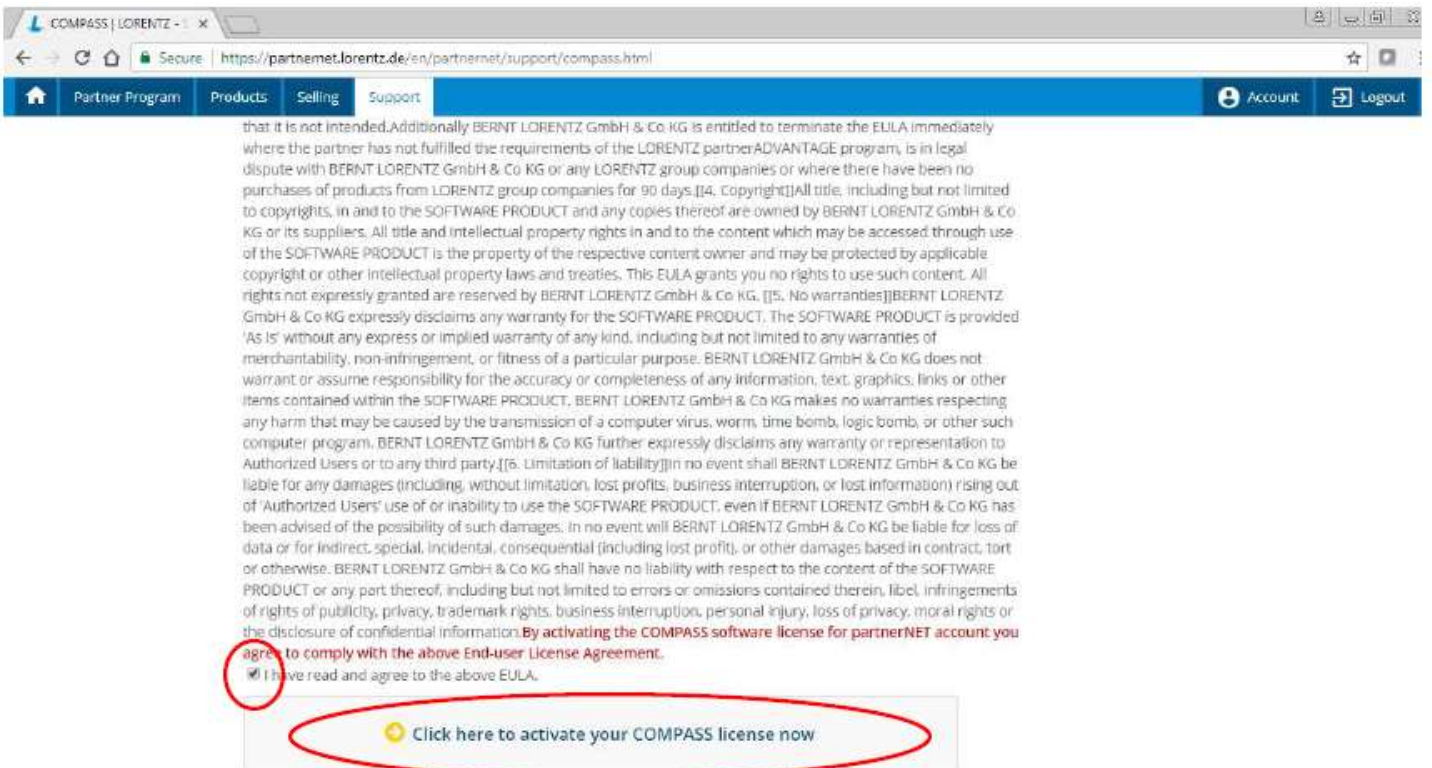

Step 7: Then follow the steps to Download and Install COMPASS.

Once installation is complete, you will be requested for License ID which can be found under Activation.

The screenshot shows a web browser window with the URL <https://partnernet.lorenz.de/en/partnernet/support/compass/about-installation-activation.html?activate=1>. The page features a navigation menu with 'Partner Program', 'Products', 'Selling', and 'Support'. A sidebar on the left lists 'pumpMANAGER Credits', 'Buy pumpMANAGER Credits', 'PumpScanner', 'Troubleshooting', 'Problem Reporting', and 'Trade Information'. The main content area includes a blue banner for 'COMPASS 3.1 Solar Pump System Planner' with a compass icon. Below the banner, a red-bordered box highlights the 'Download and Install COMPASS' section, which contains the following instructions:

- To use COMPASS you will need a PC running Windows XP, Windows Vista, Windows 7 or Windows 8.
- Install Microsoft .Net Framework 4.0 – [download](#)
- Install the newest version of LORENTZ COMPASS – [download](#)
- Activate your COMPASS license below and enter license ID when requested.

Below this box, the 'Activation' section states: 'COMPASS is activated for your account. Your license ID is: 54807301112162'. The license ID is circled in red.

Finally: Accept terms of use and the program is ready for use.

A shortcut named 'COMPASS' will be created in your desktop from where you can access the program.

Also by default a folder named 'LORENTZ COMPASS' is created under 'Documents' where all reports will be saved

END